


**EZO-O2<sup>TM</sup>**  
**Replacement Head**

**Removing the old sensing head**



To remove the old sensing head on the EZO-O2<sup>TM</sup> hold the sides of the sensor head and gently lift up.

## **EZO-O2<sup>™</sup>** **Replacement Head**

### **Installing the new sensing head**

To install the new sensing head on the EZO-O2<sup>™</sup> line up the connector pins on the bottom of the sensing head, to the slots in the body of the device.

Gently push down on the sensing head until you hear a soft click.

### **Important Calibration Information**

After the new sensing head has been installed, it is important to leave the sensor head connected to the EZO-O2<sup>™</sup> (*unpowered*) for 24 hours.

After 24 hours, you may then issue the calibration command.

