

Introduction

The T200 and T500 are underwater thrusters designed to be rugged, powerful, and flexible in many applications like high-power ROVs, surface vessels, AUVs, as well as human-carrying applications like kayaks. This guide will show you how to operate, service, and troubleshoot your T200 or T500 thruster.

Important Safety Notes

Always practice caution when you're working with electricity in water.

Keep body parts away from the thruster inlet and outlet to avoid injury. Always practice caution with the spinning blades of the propeller.

Do not operate the thruster for more than 10 seconds outside of water (while dry). The bearings require water for lubrication and may be damaged if the thruster is operated for an extended period of time while dry.

Avoid sucking seaweed or other objects into the thruster to avoid damage.

Most threadlockers are not chemically compatible with polycarbonate and will damage the thrusters if used on any of the screws. Only use a threadlocker that is chemically compatible with polycarbonate on the mounting screws if necessary.


A clicking sound or noisy thruster is normal, especially when operated while dry. Most noise and vibration go away once the thruster is operated in water.

Thruster Overview

The following is some basic information to help you get familiar with the T200 and T500 thrusters.

Parts of a Thruster

This diagram shows the main components of a T200 or T500 thruster.




Thruster Direction


The front of the thruster is the side where the cable enters the nose cone.



The T200 and T500 are designed to optimize thrust and efficiency when thrusting in the forward direction. The thruster is thrusting in the forward direction when water enters from the front and is expelled through the back of the nozzle.

Forward Thrust: more thrust and greater efficiency





The thruster can also generate thrust in the reverse direction, although at slightly lower force and efficiency.


Reverse Thrust: Less thrust and efficiency

Forward and reverse thrust performance specifications are available in the [T200](#) and [T500](#) performance charts.

Propeller Direction

Every thruster includes both a clockwise rotating propeller and a counterclockwise rotating propeller. The propellers are labeled with "CW" (clockwise) and "CCW" (counterclockwise) for easy identification. Propeller

direction can also be determined by viewing the thruster from the front nose cone and looking at the direction of the leading edge of the blades:



A clockwise propeller will generate forward thrust when spinning in the clockwise direction. Likewise, a counterclockwise propeller will generate forward thrust when spinning counterclockwise.

Both clockwise and counterclockwise propellers can generate thrust in the forward and reverse directions.

What is the other propeller direction for?

When a thruster spins, it creates torque on the vehicle. This torque can cause undesired rotation of the vehicle. To fix this, opposite (counter-rotating) propellers can be used on pairs of thrusters that are on the same axis to cancel out their torques.

Instructions for switching the installed propeller are available in the [Changing a Propeller](#) section of this guide.

Operation


To operate a thruster you need:

- The thruster
- A brushless electronic speed controller (ESC)
- A power source
- A signal to control the ESC

Each of these components is essential to operating a thruster.

The rest of these instructions apply to operating a thruster with a Blue Robotics or similar ESC, but the thrusters can also be used with other kinds of ESCs. If you are using a non-Blue Robotics ESC, you should refer to your ESC's documentation for operation instructions.


The following diagram shows how everything is connected:



We often get the question of whether an ESC is always required, even if controlling the speed or the direction of a thruster is not desired. The answer is yes, an ESC is always required. At the core of a thruster is a brushless DC (BLDC) motor. Like any other BLDC motor, an ESC is required to energize the motor phases at the correct timing to drive the motor. If you try to use a thruster like a common brushed motor, you will just end up with a broken thruster.

1. Connecting to an ESC

The thruster cable has three conductors that terminate in tinned wire ends.



Connect these three thruster wires to the three motor phase wires from the ESC. How you connect the wires is up to your preference. The wires can be soldered together or you can use connectors like bullet connectors or screw terminal blocks. The order does not matter, the thruster will spin with the wires connected in any configuration. If the thruster is spinning in reverse of what is desired, swap the connection of two of the wires.

2. Connecting to a Power Source

After the thruster is connected to the ESC, connect the red (positive) and black (ground) ESC power wires to a power source. The power source voltage

should be within the operating voltage range for the thruster you are powering, this is: 7–20 V for the T200 and 7–24 V for the T500.

When the ESC is connected to power you should hear three beeps in rising pitch indicating the ESC is receiving power.

T500 Voltage Limitation


The T500 Thruster has a maximum operating voltage of 24 V. The T500 can also be powered using a 6S Lithium-ion/Lithium polymer battery (maximum). Continuous full throttle use should be limited to 1 minute or less when the T500 is operated at 24 V or with a fully charged 6S Lithium-ion/Lithium polymer battery to avoid overheating the thruster.

3. Sending the Signal

Connect the white ESC signal wire to the signal source output. Connect the black (ground) ESC wire to a ground pin on the signal source device. Send a PWM signal of 1500 microseconds (μs) to initialize the ESC. The ESC must be initialized before it can accept any other throttle signals. When the ESC is initialized you should hear two more beeps. The first beep indicates the ESC detects a throttle signal and the second beep indicates that the correct 1500 μs signal is detected and the ESC is now fully initialized.

After the ESC is initialized, sending a PWM signal from 1100 μs to 1900 μs will control the throttle of the thruster:

- 1500 μs to stop the thruster
- >1525 μs to 1900 μs for forward thrust
- <1475 μs to 1100 μs for reverse thrust



If the thruster is spinning in reverse of what is desired, swap the connection of two of the wires.

While testing your thrusters, do not operate them for more than 10 seconds outside of water (while dry). The bearings require water for lubrication and may be damaged if the thruster is operated for an extended period of time while dry. You may also notice a clicking noise or that some thrusters are noisier than others. This is normal. Because of the tolerances of the plastic bearings and the metal rotor shafts, the rotor shaft can move slightly in the bearing causing variation in how different thrusters sound. Any noise is significantly reduced or eliminated when operated in water.

If you are having problems with thruster operation please refer to the [Troubleshooting](#) section of this guide.

What kind of device can be used as a signal source?


Pretty much anything that can output the correct PWM signal! The PWM signals used by the ESC are the same signals commonly used by RC receivers or to control servos. The following are a few examples of devices that can be used as a PWM signal source:

Blue Robotics Thruster Commander

The Thruster Commander is a great way to get started using our thrusters. We recommend it for first-time users and anyone who is not sure about what signal source they should use. It's also great for controlling thrusters on a stand-up paddle board, kayak, fishing float, etc.

Arduinos, Raspberry Pis, and other types of microcontrollers and SBCs

These can be used for a multitude of projects, from human-operated vehicles to fully autonomous vehicles.



RC transmitters/receivers

These are a good choice for adding simple wireless controls to a vehicle. Just remember, they don't work underwater!



Simple Servo testers


Probably the most simple type of signal source. Servo testers work well for testing thrusters (go figure) or as a super simple, single-input control method.




Thruster Mounting

The thruster nozzle has four mounting holes that can be used to securely mount the thruster. The screw hole spacing and screw size for each thruster are provided below.

T200



T500



The T200 also has an optional mounting bracket for situations where it is not convenient to use the default mounting location. This bracket is not compatible with the T500 thruster.

Thruster Tools


Refer to the table below for tool and screw sizes. All hardware is 316 stainless steel.

Thruster	T200		T500	
	Screw Size	Drive	Screw Size	Drive
Nozzle screws	M2.9x12 mm Phillips, flat head, self tapping	#2 Phillips	M3.9x13 mm Phillips, flat head, self tapping	#2 Phillips
Nose cone screws	M3x8 mm socket head cap	2.5 mm hex	M3x8 mm socket head cap	2.5 mm hex
Propeller screws	M3x5 mm button head cap	2.0 mm hex	M4x6 mm button head cap	2.5 mm hex
Shaft collar set screw	M4x4 mm set screw	2.0 mm hex	M5x6 mm set screw	2.5 mm hex

Changing a Propeller

Every thruster includes both a clockwise rotating propeller and a counterclockwise rotating propeller. Changing the installed propeller is quick and easy. Refer to the [Thruster Tools](#) table for exact tool sizes.

1. Use a Phillips screwdriver to remove the four nozzle screws from the nozzle then pull the nozzle away from the rest of the thruster.



2. Remove the propeller screws using a hex driver and pull the propeller off of the rotor.



3. A different propeller can now be installed onto the rotor.




4. Follow the directions in reverse to reassemble the thruster.

Thruster Disassembly and Reassembly

You may have to take apart your thruster occasionally for cleaning and maintenance. Follow the instructions below to disassemble your thruster. Refer to the [Thruster Tools](#) table above for exact tool sizes.

1. Use a Phillips screwdriver to remove the four nozzle screws from the nozzle then pull the nozzle away from the rest of the thruster.



2. Use a hex driver to remove the two nose cone screws.




3. Remove the nose cone. Take notice of how the thruster cable bends and exits the nose cone on the opposite side. This is important when reassembling the thruster.



4. Rotate the propeller by hand until the shaft collar set screw lines up with the notch in the stator base. Use a hex driver to loosen the set screw.



5. Do not pry up on the shaft collar to remove it. Instead, pull the propeller away from the thruster core to separate it from the stator.



6. Use a hex driver to remove the propeller screws.



7. With the propeller screws removed, you can separate the propeller from the rotor. Your thruster is now completely disassembled.



Reassembly

1. Install the propeller onto the rotor using the propeller screws and a hex driver.
2. Ensure the shaft collar is in the stator base then install the propeller and rotor onto the thruster core.

Be very careful when installing the T500 rotor onto the core. The T500 magnets are very strong and the rotor will be pulled onto the stator very forcefully if not installed with caution.

3. Use a hex driver to tighten the shaft collar set screw onto the flat side of the rotor shaft.

4. Install the nose cone onto the core making sure the cable exits the nose cone on the opposite side. Do not bend the cable in the other direction.



5. Install the nozzle using the nozzle screws and a Phillips screwdriver.

Care and Maintenance

After Every Use

- Rinse with fresh water after use in saltwater to minimize the accumulation of salt deposits.
- Rinse with fresh water after use in sandy or sediment-heavy environments.

Every Five to Ten Uses

- Inspect the inside of the rotors and remove any buildup.
- Inspect the cable jacket for tears or damage.

Troubleshooting

ESC Beeps

When a thruster is connected to an ESC, the ESC can use it as a “speaker” to play a series of beeps. These beeps provide information about the status of the ESC and are useful for troubleshooting. Both the Basic ESC and Basic ESC 500 have slightly different beeping patterns.

Basic ESC

1. At power on the ESC will beep three times in rising pitch. If you do not hear these beeps:

- The ESC may not be receiving power. Check your power supply and all power connections.
- The thruster may not be connected correctly to the ESC. Check that there is a good connection between the three ESC motor wires and the thruster wires.
- The ESC may be defective.

2. If any throttle signal is detected the ESC will then beep one time. If you do not hear this beep:

- It means the ESC is not receiving any sort of throttle signal. Check the signal source to see if it is powered on and sending the correct signal.
- Check the connection between the signal source and the white ESC signal wire.

3. If the initialize/stop signal (1500 μ s) is detected the ESC will beep one final time indicating that it is fully initialized. If you do not hear this beep:

- It means the ESC is not receiving the correct 1500 μ s signal. Check if your signal source is sending the correct 1500 μ s signal.

Basic ESC 500

1. At power on the ESC will beep once. If you do not hear this beep:

- The ESC may not be receiving power. Check your power supply and all power connections.
- The thruster may not be connected correctly to the ESC. Check that there is a good connection between the three ESC motor wires and the thruster wires.
- The ESC may be defective.

2. If the initialize/stop signal (1500 μ s) is detected the ESC will beep three times in rising pitch indicating that it is fully initialized. If you do not hear these beeps:

- It means the ESC is not receiving the correct 1500 μ s signal. Check if your signal source is powered on and sending the correct 1500 μ s signal.
- Check the connection between the signal source and the white ESC signal wire.

The thruster does not spin or move at all

- This is usually an issue with the improper operation of the ESC. Refer to the ESC Beeps section above to troubleshoot the ESC.

The propeller tries to move but does not spin correctly

- All three thruster wires may not be connected to the ESC motor wires correctly. Check that there is a good connection between the three ESC motor wires and the thruster wires.
- There may be a broken thruster wire or a short between thruster wires. Check the resistance of each thruster wire pair (blue wire/green wire, blue wire/white wire, green wire/white wire) using a multimeter. Each thruster wire pair should have the same resistance within 0.1-0.2ohms or so. If there is no continuity between a pair, or one pair has significantly higher resistance, the thruster is defective.
- Try to rotate the propeller by hand, it should spin freely. If it is difficult to rotate, disassemble the thruster and check for damage or blockage.

The propeller is jammed and cannot be turned by hand

- This can be caused by something jamming the propeller or by major internal damage caused by overheating, short circuits, heavily worn bearings, etc. Completely disassemble the thruster and inspect for damage or blockage.

Swap-Components Troubleshooting

A great way to troubleshoot a problem is to swap components with other known-working components and observe whether the problem stays in place or moves with the component. To troubleshoot a thruster using this method you will need an different thruster and ESC set that you have confirmed is working normally.

1. Swap the problematic thruster with a thruster that you know works well. That is, connect the problematic thruster to the ESC that was connected to the working thruster and connect the working thruster to the ESC that was connected to the problematic thruster. If the problem follows the thruster, you know that the thruster is defective. If the problem stays with the ESC, move on to the next step.
2. Swap the signal sources of the ESCs. If the problem follows the problematic ESC, you know the ESC is defective. If the problem stays with the signal source, then there is a problem with the signal source.

Source: www.bluerobotics.com 09/2024