

Installation Guide

Service Assurance


Thank you for purchasing this product. You can enjoy one-year free spare parts and manual service assurance provided by our company.

The following conditions lead to the need for our company to provide services, and the maintenance fees will be charged as appropriate:

- Failure to perform proper operations according to the user manual or instructions, Man-made damage, computer viruses, dampness, improper software installation or self-disassembly, etc.
- Fire, flood, wind, earthquake and other irresistible forces
- Abrasive wear caused by accessories, consumables and natural use.
- If we need to re-install software or adjust computer settings on our behalf, we will charge fees as appropriate.
- Our company provides warranty for the damaged or dirty logo which may result in unrecognizability.


Before the product is repaired, please make a separate backup of your personal data and files, which may affect the integrity of the data during the process of maintenance. The company guarantees maintenance services so that you can buy and use it at ease

Product Interface Description



Instructions

1. Connect the device with the display device (such as TV, screen, projector, etc.) via HDMI line, and select the "video input source" of the display device to the connected HDMI input channel.
2. DC-IN power supply: Connect the DC-IN interface of the power cord of the accessories to the device and insert the other end directly into the plug.
3. Use the device by connecting it with a wired or wireless keyboard and mouse via USB port.
4. Press the power button to start the system.



Power Adapter (factory accessories)
It can be used with Bluetooth or wireless keyboard and mouse (self-provided)

- Packing List:**
1. Computer * 1
 2. User Manual (Warranty Card) * 1
 3. Power Adapter * 1 (Not included in TELEC version)

Attention

1. This product is suitable for places below 3000 meters above sea level; this product is only suitable for nan-tropical areas. / 2. Be very careful when performing operations that may cause damage or loss of files. / 3. After abnormal withdrawal or accidental power failure of the mini pc system, the hard disk scanning should be carried out as soon as possible to repair the errors in time. / 4. When the mini pc boots, we should pay attention to the defense of the virus and try to use the virus firewall. / 5. Turn on the display, printer, and other peripherals first, and finally turn on the device. Turn off the device first then turn off the display. / 6. If you do not use the device for a long time, turn off the main power switch. / 7 The ideal working temperature of the device is 10-35 degrees, and the relative humidity is 30-80%. / 8. The device should not be powered off for a long time (e.g. 1-3 months) before using it. / 9. The device should not be turned on or off frequently; the time interval between two boots should be at least 10 seconds. preferably no less than 60 seconds. / 10. You can't move the device or turn off the power while reading/writing to the hard disk. Wait for about 30 seconds after shutting down it. / 11. Pay attention to dust control, keep the environment clean and hygienic, and wipe it with a dry soft cloth. / 12. Avoid direct exposure of strong light to the device, and do not put it near the strong magnetic field. / 13. Don't get water, food and other fluids onto the device, and don't pull the data and power lines with force. / 14. Rationally organize the directory structure of the disk and always keep a copy of important things on the hard disk.