

ARPI600

From Waveshare Wiki

Contents

- 1 How to start up serial debugging function
- 2 How to control peripherals by Raspberry Pi
 - 2.1 System serial port configuration
 - 2.2 Install relative libraries
 - 2.3 Serial data display
- 3 Building a wireless network with two XBee modules
 - 3.1 Preparations
 - 3.2 Installing X-CTU tool
 - 3.3 Testing the connection between PC and XBee
 - 3.4 Configuring XBee-A module
 - 3.5 Configuring XBee-B module
- 4 How to perform wireless transmission with XBee
- 5 RTC clock
- 6 AD conversion (ARPI600 on-board chip TLC1543)
 - 6.1 Configuring Pin A0 to Pin AD
 - 6.2 Configuring as other AD pins
- 7 Interface description
 - 7.1 Interface over view
- 8 Application Notes
- 9 Datasheets
- 10 Software
- 11 FAQ
- 12 Support

How to start up serial debugging function

1. Please install a USB to UART driver (cp2102 driver) before applying Raspberry Pi board. After the installation, please open Device Manager to check whether the PC can identify the USB to UART driver.
2. After connecting ARPI600 to Raspberry Pi board, you should power up the Raspberry Pi board and then connect ARPI600 to the USB port on your PC. It is not recommended to connect ARPI600 to the USB port on PC before powering up Raspberry Pi board or for power supply, since the power supply capability of the USB port on PC is not powerful enough to support Raspberry Pi board and ARPI600 expansion board at a same time.
3. The Raspbian system is set to serial debugging output by default, so you should configure the jumpers on the ARPI600 in order to start up the serial debugging function for PC.
 - Connect CP_RX to P_TX
 - Connect CP_TX to P_RX


Starting up serial debugging function



4. Start software/putty.exe, and configure the following parameters marked with red boxes shown in the Figure
 - Serial line: it is used to select corresponding serial port. In this example, the serial port is COM3, please configure this option based on the actual situation (The serial port in used can be check by Device Manager).
 - Speed: it is used to set the Baud rate: 115200.
 - Connection type: this option should be set to Serial.


And then, click the button Open.

PuTTY settings



5. Then, you will see a window popped up as the following figure shows (If there is nothing shown in the window, please press the key Enter, then you can see the information displayed as the figure shows).

Connecting PuTTY to Raspberry Pi board



6. In this window, you should input following information:

User name: pi

Password: raspberrypi

Then, you can enter the serial terminal.

How to control peripherals by Raspberry Pi

System serial port configuration

1. Enter the terminal of Raspberry Pi, and run:

```
sudo nano /boot/cmdline.txt
```

Then, you should modify the following lines:

```
wc_otg.lpm_enable=0 console=ttyAMA0,115200 kgdboc=ttyAMA0,115200 console=tty1 root=/dev/mmcblk0p2  
rootfstype=ext4 elevator=deadline rootwait
```

into:

```
dwc_otg.lpm_enable=0 console=tty1 root=/dev/mmcblk0p2 rootfstype=ext4
```

```
elevator=deadline rootwait
```

Press the keys Ctrl+X, and select the option Y to save the modification.

2. Run the code:

```
sudo nano /etc/inittab
```

And modify the following lines:

```
#Spawn a getty on Raspberry Pi serial line
```

```
T0:23:respawn:/sbin/getty -L ttyAMA0 115200 vt100
```

into:

```
#Spawn a getty on Raspberry Pi serial line
```

```
#T0:23:respawn:/sbin/getty -L ttyAMA0 115200 vt100
```

Press the keys Ctrl+X, and select the option Y to save the modification.

3. Run the code:

```
sudo reboot
```

After completing the modifications described above and restarting the Raspberry Pi board, the serial debugging function is started up. In this mode, you cannot enter the terminal of the Pi via the serial port any more, but can control the serial output by the

software (If you want to reset the serial port to the serial debugging output, please restore the factory settings and restart the Raspberry Pi. Therefore, it is recommended to backup the Raspbian before making any modification).

Install relative libraries

1. Copy the library file `software/wiringPi.tar.gz` into Raspberry Pi (you can perform it by a U disk), and enter the terminal of Raspberry Pi to input the following code:

```
sudo tar xvf wiringPi.tar.gz
```

```
cd wiringPi/
```

```
chmod 777 build
```

```
./build
```

2. After installing the library, input the following code:

```
gpio -v
```

3. Now, you can check whether the installation is successful.

Serial data display

1. Set the jumpers on the ARPI600: connect P_RX to P_TX, and CP_TX to CP_RX. And connect the ARPI600 to the USB port on your PC.
2. Start the PuTTY serial debugging software to configure following parameters:
 - Serial line: it is used to select corresponding serial port.
 - Speed: it is used to set the Baud rate: 9600 (Notices: the parameter Speed in here is set to 9600, differently from the configuration shown in the figure).
 - Connection type: this option should be set to Serial.
3. Copy the file `program/Xbee/send` into the Raspbian, and enter the folder `send`, then, execute the following code:

```
sudo make
```

```
sudo ./serialTest
```

The terminal will display the data as



Building a wireless network with two XBee modules


Preparations

1. Two XBee modules
2. Two ARPI600 modules
3. Two Raspberry Pi boards
 - In this document, we will divided the device above into two groups: Group A and Group B, of which Group A contains XBee-A, Raspberry Pi board-A and ARPI600-A, and Group B contains XBee-B Raspberry Pi board-B and ARPI600-B.

Installing X-CTU tool

1. Double click the file software/X-CTU V5.2.8.6.exe on your PC to start installing X-CTU tool. After a successful installation, you can open the X-CTU tool as the figure shows.

X-CTU setting




2. Configure the XBee module. The default setting of XBee is as followed:
 - Baud: 9600
 - Data Bite: 8
 - Parity: NONE
 - Stop: 1

Testing the connection between PC and XBee

1. Connect XBee-A to ARPI600-A, and XBee-B to ARPI600-B, respectively.
2. Set the jumpers on ARPI600 to start up the serial debugging function for the XBee, as the figure shows.
 - Connect XB_RX to CP_RX
 - Connect CP_TX to XB_TX

Jumpers setting for serial debugging function between the Pi and the XBee

3. Power up Raspberry Pi board (For more detailed information.
4. Click the button Test/Query to check whether the connection between the ARPI600 and the XBee is established successfully.



5. For a successful connection, you can see the dialog box as the figure shows.

Successful connection



Configuring XBee-A module

1. Select the option Modem Configuration, and click the button Read to read out the current parameters of XBee.

Reading out current parameters



2. Select the option ZIGBEE ROUTER/END DEVICE AT under the pull-down menu Function Set:

Selecting the option ZIGBEE ROUTER/END DEVICE AT under Function Set




3. Set the read Networking parameters:
 - ID: 234
 - DH: 0
 - DL: 0
4. Click the button Write to download the configured parameters into the XBee-A module.

Configuring XBee-B module


1. Configure XBee-B module according to the processes described in the Section 3.1 and the Section 0. However, there is something different. In configuring XBee-B, you should select the option ZIGBEE COORDINATOR AT under the pull-down menu Function Set:

Selecting the option ZIGBEE COORDINATOR AT under Function Set



2. Set the read Networking parameters:
 - ID: 234
 - DH: 0
 - DL: ffff
3. Click the button Write to download the configured parameters into the XBee-B module.
4. In order to implement a simple P2P network, please configure XBee-A and XBee-B according to the processes described above. Start two X-CTU tools, and select different COM interfaces in the option PC Settings to control Group A and Group B respectively.
5. Input the data to be transmitted in the X-CTU Terminal of XBee-A, then, you can find that the inputted data will be sent to XBee-B automatically, and displayed in the X-CTU Terminal of XBee-B. In the X-CTU, data in blue is the data to be sent, and data in red is the received data.

Data transmission and receive



6. This Figure shows the normal operating state of XBee module.

How to perform wireless transmission with XBee

Before performing the wireless transmission with XBee, please make sure the wireless network built by two XBee modules is work properly. For more information about how to build the wireless network, please refer to Section 3.

1. Set the jumpers on ARPI600:

Here, we should use two Raspberry Pi boards: Raspberry Pi-A and Raspberry Pi-B, of which Raspberry Pi-A is used for transmitting data and Raspberry Pi-B is used for receiving data.

Connect Raspberry Pi-A to the serial port of XBee-A and Raspberry Pi-B toXBee-B, respectively. And then, set the jumpers on ARPI600, as the shows.

- Connect XB_RX to P_TX
- Connect XB_TX to P_RX

Setting jumpers on ARPI600

2. Testing the serial port:

Copy the file program/Xbee/getdata to the Raspberry Pi-B, and enter the folder getdata.

Then, execute the code:

```
sudo make
```

```
sudo ./serialTest
```

The relative data will be displayed as followed.

Displaying the message getdata



```
pi@raspberrypi /getdata $ sudo ./serialTest
getdata
```

3. Run the code for transmitting data on Raspberry Pi-A. Then, copy program/Xbee/send into the Raspbian, and enter the folder send to execute the following code:

```
sudo make
```

```
sudo ./serialTest
```

You will see the following message displayed in the PuTTY of Raspberry Pi-B.

RTC clock

1. Set the jumpers on RTC JMP of the ARPI600.
2. Open the LXTerminal on the desktop of Raspbian, and input the code:

```
i2cdetect -y 1
```

3. Then, you will see the device address of PCF8563 connected to Raspberry Pi. Here, the device address of PCF8563 is 51, which means the PCF8563 is identified by Raspberry Pi.

The device address of PCF8563 connected to Raspberry Pi

4. Enter LXTerminal, and run:

```
modprobe i2c-dev
```

```
echo pcf8563 0x51 > /sys/class/i2c-adapter/i2c-1/new_device
```

```
hwclock -r
```

(Read out the time of the connected RTC based on I2C)

LXTerminal will display the time clocked by PCF8563 which may be different from the Raspbian)

5. Enter LXTerminal, and run:

```
hwclock -w (Write the time of the Raspbian into PCF8563)
```

```
hwclock -r
```

(Synchronize the time of Raspbian to PCF8563)

```
hwclock -s
```

(Synchronize the time of Raspbian with hardware RCT)

AD conversion (ARPI600 on-board chip TLC1543)

Configuring Pin A0 to Pin AD

1. Please make sure you have installed relative libraries (refer to the Section 2.2: Installing relative libraries).
2. Set the jumpers to select reference voltage:
 - Connect REF to 5V, which means the AD conversion reference voltage is 5V (connecting to 5V is a default setting).
 - Connect REF to 3V3, which means the AD conversion reference voltage is 3.3V.

Notices: REF can only be connected to one reference voltage at a time.

Setting AD reference voltage



3. Copy the file program/AD_TLC1543 in to Raspbian. Then, enter the folder AD_TLC1543, and execute the following code under the terminal:

```
sudo make
```

```
sudo ./tlc1543
```

4. Terminal will display relative AD conversion value. By default, the displayed conversion value is come from Pin AD0 on TLC1543 (Pin T_A0 on ARPI600).
5. Connect the jumpers T_A0 to A0, then the Pin A0 on Arduino interface can sever as an AD conversion pin, as shows.

connecting Pin T_A0 to Pin A0

Configuring as other AD pins

1. If you want to display the conversion value from other AD pins on TLC1543, please enter the terminal and edit the file tlc1543.c:

```
sudo nano tlc1543.c
```

Find out the following line:

```
re=ADCSe1Channel(0);
```

Modify the "0" in the line into the number corresponding to other AD pin (For

example, modify to "1" for testing the conversion value from Pin AD1 (Pin T_A1), and modify to "2" for testing the conversion value from Pin AD2 (Pin T_A2), and so on, until to "10" for testing the conversion value from Pin AD10 (T_A10)).

After completing the operation described above, press the keys Ctrl+X, and select the option Y to save the modification.

- Execute the following code under the terminal:

```
sudo make
```

```
sudo ./t1c1543
```

Now, the modification is in effect.

Interface description

Interface over view

The default relationship between Arduino digital control pins and Raspberry Pi IOs is shown in the table. The relationship between Arduino digital control pins and Raspberry Pi IOs

APRI600	IO of Raspberry Pi B+
D0	P_RX
D1	P_TX
D2	P0
D3	P1
D4	P2
D5	P3
D6	P4
D7	P5
D8	P6
D9	P7
D10	CE0
D11	MOSI
D12	MISO
D13	SCK

The jumper pins D11, D12 and D13 on the module are used for configuring the ARPI600. And these pins should be shorted by the 0Ω resistances.

Configuring the jumpers D11, D12 and D13

In factory settings, the jumpers are set as followed:

- Connect SCK to D13
- Connect MISO to D12
- Connect MOSI to D11

The following settings are connecting pins D11, D12 and D13 to the general IO control pins of Raspberry Pi board.

- Connect D13 to P26
- Connect D12 to IO_SD
- Connect D11 to IO_SC

Notices: Users can modify the settings of these jumpers as required. In this operation, welding is required. Any changes under no guidance from Waveshare will be considered as a waiver of warranty.

The pins A0-A5 of ARPI600 can also be configured as IO pins or ADC pins.

configuring Pins A0-A5

a) When the pins A0-A5 are connected to 1, they will sever as IO control pins. The relationship between the pins A0-A5 and the pins of Raspberry Pi board is as the table shows.

The relationship between the pins A0-A5 and the pins of Raspberry Pi board

APRI600	IO of Raspberry Pi B+
A0	CE1
A1	P21
A2	P22
A3	P23
A4	P24
A5	P25

b) When the pins A0-A5 are connected to 3, they will sever as ADC pins.

You can also connect the pin A4 to P_SCL, and the pin A5 to P_SDA (as the figure shows), to making them sever as I2C control pins of Raspberry Pi board. However, in default settings, the pins A4 and P_SCL are disconnected, and so do the pins A5 and P_SDA.

Notices: Users can modify the settings of these jumpers as required. In this operation, welding is required. Any changes under no guidance from Waveshare will be considered as a waiver of warranty.

Setting the pins A4 and A5 as I2C control pins

ARPI600 provides sensor interfaces 4P. The figure shows the jumper settings for sensor interface 4P.

Sensor interface 4P

In which:

- The pins on A are connected to the ADC pins A6-A10 of TLC1543;
- The pins on D are connected to the IO control pins P0-P4 of Raspberry Pi board.

Users can apply different sensors via the sensor interface.

Resources

- Introduction (<http://www.waveshare.com/ARPI600.htm>)
- Schematic (<http://www.waveshare.com/w/upload/0/06/ARPI600-Schematic.pdf>)
- Code (<http://www.waveshare.com/w/upload/9/9f/ARPI600-Code.zip>)

Application Notes

- CP2102
- PCF8563
- Writing the Img to the SD card (<http://www.waveshare.com/w/upload/4/49/Writing-the-Img-to-the-SD-card.pdf>)
- Libraries Installation for RPi

Datasheets

- TLC1543 Datasheet
- CP2102
- PCF8563

Software

- Panasonic_SDFormatter (http://www.waveshare.com/w/upload/d/d7/Panasonic_SDFormatter.zip)
- Win32DiskImager (<http://www.waveshare.com/w/upload/7/76/Win32DiskImager.zip>)
- putty (<http://www.waveshare.com/w/upload/5/56/Putty.zip>)
- wiringPi & bcm2835 C LIB
- CP2102 Driver

FAQ

Support

Email: service@waveshare.com

Our working time: 09:00-18:00 (**UTC+8** Monday to Saturday)

Retrieved from "<http://www.waveshare.com/w/index.php?title=ARPI600&oldid=6037>"

Categories: Expansions | Raspberry Pi | Arduino

- This page was last modified on 7 August 2015, at 16:21.
- This page has been accessed 2,356 times.